Quick Start Guide

- **App Installation**
- **Camera Network Installation**
- **Live view and settings**

App Installation

Download **iMega Cam** from App Store or Google Play Store.
And install APP.

Android IOS iMega Cam

Camera Network Installation

Camera Smart Link Connection

Connect the power adapter to the camera. Then the camera will start a pan &tilt cycle or play a sound "Ding", it indicates that the camera is in Smart Link mode. (Pan&tilt function is only for PT cameras)

Note:

- If you haven't heard the "Ding" sound after plugging power cord, please RESET camera.
- If you want to turn off "Ding" sound, please power off camera or switch to camera wired connection(Only for camera with RJ45 port).

Run the **iMega Cam** APP, tap to add a camera.Tap"Wireless Installation" and enter Wi-Fi password. Tap "Settings"(or "Set") and wait until the camera automatically connects to Wi-Fi network (If the operation failed, please try again) .



Version: DSD16081





Monitor screen buttons explanation

Tap to talk or listen to camera
Tap to take snapshots of live view
Tap to record video of live view
Tap to select camera video resolution
Tap to get mirror or flip video
Tap to set preset position
Tap to exit live view

Vertical & Horizontal view: Slide the screen(live view) to adjust camera shooting angle.

Camera settings

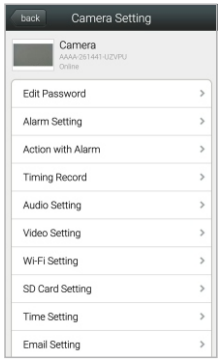


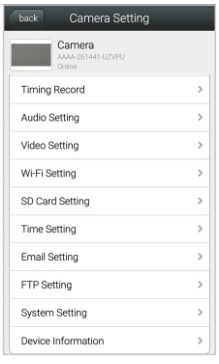

When the "Ding" sound stops which means smart link set up successfully. Please select your camera and enter default password "admin".


Note:
When you find smart link set up failed, please check:
Make sure your phone connect to Wi-Fi and near to the camera.
Camera only supports 2.4GHz wireless band, if your wireless router is 5GHz, please switch to 2.4GHz.

Camera Wired Connection (Only for camera with RJ45 port)



Plug power adapter into camera and connect the camera to your router with a network cable.

Automatically search camera in local area network or scan the camera UID using smart phone.



Select your camera and enter camera password. Default password is "admin".

Live View & Settings

When camera is installed, camera will come out in the camera list.

Tap on camera , enjoy the live view!

Edit Password: Change camera password.
Alarm Setting: Switch On \ Off motion detection mode and adjust alarm sensitivity.
Action with Alarm: Switch On / Off different alarm channels. Select and send picture or video to email, micro SD card, FTP server, APP.
Timing Record: Schedule a time to record a video, audio or screen activities at a particular time.
Audio Setting: Adjust camera input and output audio volume.
Video Setting: Set video parameters of first stream or second stream, but default settings are highly recommended.
Wi-Fi Setting: Set up camera Wi-Fi connection.
SD Card Setting: Check or format SD Card memory space
Time Setting: Update date and time on camera.
Email Setting:
SMTP Server Host: Sender's SMTP server address
Server Port: 25/ 465/ 587
Encrypt Type: None/ SSL/TLS/STARTTLS
Username: Sender email address
Password: Sender email password
Send to: Receiver email address
Sender: Sender email address
FTP Setting:
Server Address: FTP server address
Server Port: Default port 21
User name: FTP server username
Password: FTP server password
Passive Mode: Switch On/ Off memory overwrite feature
Path: The save path of FTP Server

Contact Us

D3D Security Pvt.Ltd
09:00 to 18:00 hrs. Indian Standard Time (GMT+05:30) Mon-Fri
E-mail: support@d3dsecurity.com
Web: www.d3dsecurity.com